


MODEL: ACC1004 - SQUARE SPEAKER BAFFLE

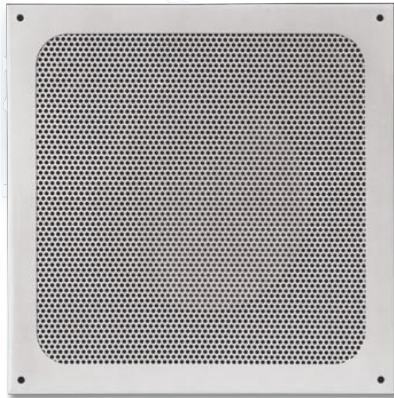

ACC1004

SPECIFICATIONS

Type: Square, two-piece, one-step contour

Material: 22-gauge, cold-rolled steel

Finish: Baked white epoxy

Size: 12.5" square (31.7 cm)

Weight: 2.3 lbs (1.0 kg)

DESCRIPTION

The Rauland ACC1004 is a popular square, flush mount, wall or ceiling baffle for 8" speakers, featuring an 80° turn on edges. Constructed of 22-gauge, cold-rolled steel, the baffle consists of a perforated front grille and separate concealed black sub-plate to

FEATURES

- Mar-Proof, Baked Epoxy Finish
- 22-Gauge Steel Construction
- Attractive Square Design
- Concealed Speaker Mounting

Recommended Backbox:

- ACC1100 – Flush Mount Square Backbox
- ACC1101 – Flush Mount Round Backbox
- ACC1102 – Surface Mount Square Backbox
- ACC1103 – Flush Mount Round Backbox
- ACC1110 – Flush Mount Round Backbox

facilitate speaker mounting. The external finish is white baked epoxy to minimize scratching and marring. The speaker mounting plate is pre-drilled to mount on the recommended backbox, plaster ring or support bridge.

ASSOCIATED EQUIPMENT

Telecenter Communication Systems

ACC1100 – Flush Mount Square Backbox

ACC1101 – Flush Mount Round Backbox

ACC1102 – Surface Mount Square Backbox

ACC1103 – Flush Mount Round Backbox

ACC1110 – Flush Mount Round Backbox

ACC1104 – Speaker/Baffle Support Bridge



Rauland is a Division of AMETEK, Inc.

USA +1 800 752 7725

Asia Pacific +65 64835750

www.rauland.com

Mid East & Africa +20 122 2154016

Europe +30 693 7501168

Latin America +1 847 454 4203

*Architect and Engineer (A&E) Specifications available online at customerconnection.rauland.com
Specifications subject to change without notice.*