


MODEL: ACC1011 - VANDAL RESISTANT, ROUND SPEAKER BAFFLE

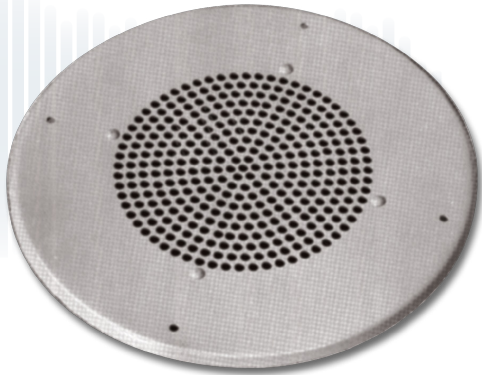

ACC1011

SPECIFICATIONS

Type: Round, two-piece construction
Material: 14-gauge, zinc treated, carbon steel
Finish: Baked white epoxy
Dimensions: 12.9" (32.7 cm) diameter
Weight: 3 lbs. (1.4 kg)

DESCRIPTION

The Rauland ACC1011 Baffle is an attractive, round, vandal resistant type designed to flush mount any 8" loudspeaker. It is ideal for use where rugged, vandal-proof speaker operation is required. Moreover, its appearance is similar to most contemporary standard round baffles so that it is unobtrusive in any installation.

The 14-gauge carbon steel faceplate has a tensile strength of more than 55,000 p.s.i. It is dipped in a zinc bath to provide extraordinary protection against rust and corrosion, and then coated with a powdered epoxy and baked to extreme toughness. A heavy gauge steel sub-plate incorporates a unique interlocking lattice grid pattern that provides maximum protection to the speaker, making it

FEATURES

- 14-Gauge, Carbon Steel Construction
- Heavy Gauge Protective Sub-Plate
- Provided with Tamper-Proof Hardware
- Mar-Proof, Baked Epoxy Finish Over A Thick Zinc Primer
- Easy, Flush Mount Installation
- Fits Most Standard Backboxes
- Attractive, Unobtrusive Design

Recommended Backbox:

- ACC1100 – Flush Mount Square Backbox
- ACC1101 – Flush Mount Round Backbox
- ACC1103 – Flush Mount Round Backbox
- ACC1110 – Flush Mount Round Backbox

virtually tamper proof. This design prevents penetration by any tool or object, yet is acoustically transparent, permitting full passage of the speaker output.

The sub-plate and speaker are secured with case hardened, square shank, carriage bolts. No special backbox is required. It is easily secured to most standard 8", flush mounted backboxes with hardened, tamper-proof screws. All mounting hardware is included.

ASSOCIATED EQUIPMENT

Telecenter Communication Systems

- ACC1100 – Flush Mount Square Backbox
- ACC1101 – Flush Mount Round Backbox

- ACC1103 – Flush Mount Round Backbox
- ACC1110 – Flush Mount Round Backbox
- ACC1104 – Speaker/Baffle Support Bridge



Rauland is a Division of AMETEK, Inc.

USA +1 800 752 7725
Asia Pacific +65 64835750

www.rauland.com

Mid East & Africa +20 122 2154016
Europe +30 693 7501168
Latin America +1 847 454 4203

*Architect and Engineer (A&E) Specifications
available online at customerconnection.rauland.com
Specifications subject to change without notice.*