


# Speakers - Horns - Speaker Accessories

**Rauland**

MODEL: ACC1201A - SPEAKER ASSEMBLY

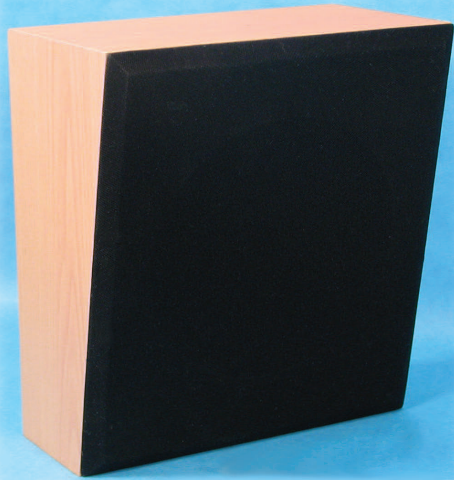

ACC1201A

## FEATURES

- Attractive oak finish baffle
- Compact configuration for universal use
- High quality 8" speaker with 25/70 Volt line matching transformer
- Pre-assembled for installation convenience
- Matched components for quality performance
- "Whizzer" cone for extended high-frequency response

## SPECIFICATIONS

**Speaker Type:** 8" (20.3 cm) permanent magnet  
**Speaker Power Rating:** 10 Watts  
**Sensitivity:** 94 dB @ 1 meter with 1 Watt, 1 KHz input  
**Frequency Response:** 60 to 20,000 Hertz  
**Magnet:** 5.3 oz. ceramic  
**Voice Coil Impedance:** 8 ohms  
**Voice Coil Diameter:** 3/4" (1.9 cm)

**Transformer:** 25V/70V

Taps @ 5/16, 5/8, 11/4, 21/2, & 5 Watts

**Baffle Size:** H: 10 1/2" (26.7 cm)

W: 9 7/16" (24.0 cm)

D @ Top: 5 1/2" (14.0 cm)

D @ Bottom: 3 3/4" (9.5 cm)

**Weight:** 4 lbs. 9 oz. (2.1 kg)

## DESCRIPTION

The Rauland ACC1201A Speaker Assembly consists of a Rauland USO188A 8" loudspeaker complete with a 25V/70V line matching transformer mounted in an oak finish MDF enclosure. The wide frequency response and superior efficiency of this speaker assembly make it an intelligent choice in both new and existing installations.

This high quality speaker with an attractive oak finish and tapered enclosure will enhance the décor of any office or classroom environment. The ACC1201A Speaker Assembly is particularly

suitable for use in classrooms, meeting rooms, or small areas where surface mount speakers of excellent reproduction quality are required. Mounting hardware is included with each ACC1201A which is packaged as a complete, assembled unit to reduce installation time and expense.



Rauland is a Division of AMETEK, Inc.

USA +1 800 752 7725

Asia Pacific +65 64835750

[www.rauland.com](http://www.rauland.com)

Mid East & Africa +20 122 2154016

Europe +30 693 7501168

Latin America +1 847 454 4203

*Architect and Engineer (A&E) Specifications available online at [customerconnection.rauland.com](http://customerconnection.rauland.com) Specifications subject to change without notice.*

Rev 05/2017 © 2017 Rauland. Printed in USA.